

Installation Instructions for Acoustic Panels Acoustic using Adhesive Kit




STEP 1:

Always handle the acoustic panels with protective gloves as they soil




STEP 2:

Assemble the rapid glue gun

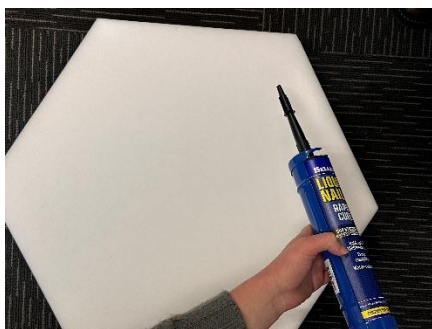


STEP 3:

Add glue to your acoustic panel

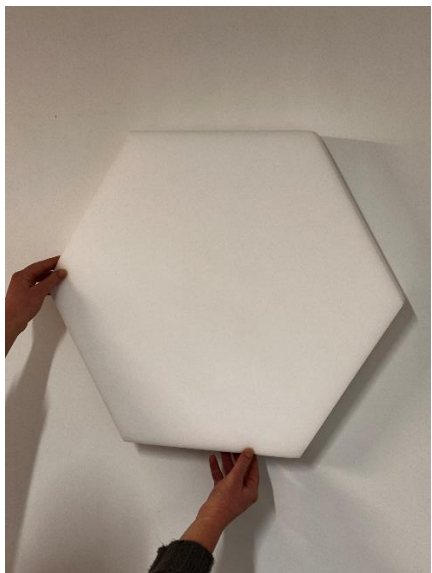

STEP 4:

Line the acoustic panels up where you want them placed on the wall

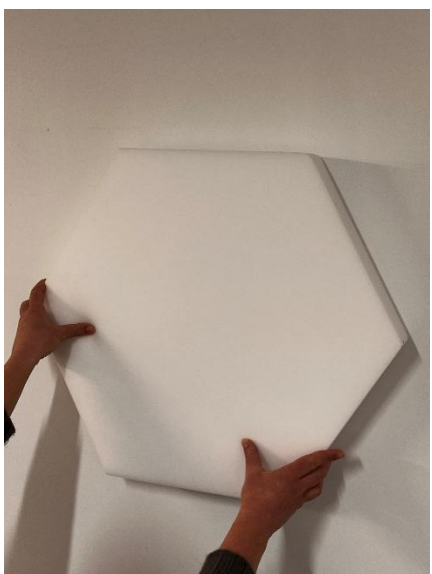

STEP 5:

Hold them in place for 15-30 seconds while the glue dries